

### LCD Digital display function:

Key-press	Mode	Description
[MENU]	Function	DMX control/colors selection/colors pulse/colors transition/sound control/annual set
[UP]	Up	Increase values
[DOWN]	Down	Decrease values
[ENTER]	Enter	Confirmation button.After pressing this button,all setting values will be saved

### Operation Instructions

MENU	Description
DO01-D512	DMX mode,change numerical value by up and down
CC01-CC64	Colors selection,select different colors by up and down
RB01-RB16	Colors shade,change speed by up and down,the bigger values,the faster
PL01-PL16	Colors pulse transform,change speed by up and down,the bigger values,the faster
SD01-SD16	Colors transition,change speed by up and down,the bigger values,the faster
FL01-FL16	Colors Strobe flash,change speed by up and down,the bigger values,the faster
Sound	Sound control mode
R000-R255	Manual set R,Red color brightness setting,change brightness by up and down
G000-G255	Manual set G,Green color brightness setting,change brightness by up and down
B000-B255	Manual set B,Blue color brightness setting,change brightness by up and down

### DMX Control Parameter Chart

Channels	Value	Function
CH1	0-255	Color brightness control(this change should use together with CH2,CH3 or CH4)
CH2	0	Red light off
	1-255	Red brightness from dark to bright
CH3	0	Green light off
	1-255	Green brightness form dark to bright
CH4	0	Blue light off
	1-255	Blue brightness from dark to bright
CH5	0-7	No strobe flash
	8-255	Strobe flash(from slow to fast),the bigger values,the faster
CH6	0-10	Manual control(CH1-CH5)
	11-60	Colors selection(colors contorted by CH7)
	61-110	Colors shade(colors contorted by CH7),the bigger values,the faster
	111-160	Colors pulse transform(speed contorted by GH7)the bigger values,the faster
	161-210	Colors transition(speed contorted by CH7)the bigger values,the faster
	211-255	Sound control
CH7	0-255	Colors selection/colors shade(the bigger values,the faster)

### LCD Digital display function:

Key-press	Mode	Description
[MENU]	Function	DMX control/colors selection/colors pulse/colors transition/sound control/annual set
[UP]	Up	Increase values
[DOWN]	Down	Decrease values
[ENTER]	Enter	Confirmation button.After pressing this button,all setting values will be saved

### Operation Instructions

MENU	Description
DO01-D512	DMX mode,change numerical value by up and down
CC01-CC64	Colors selection,select different colors by up and down
RB01-RB16	Colors shade,change speed by up and down,the bigger values,the faster
PL01-PL16	Colors pulse transform,change speed by up and down,the bigger values,the faster
SD01-SD16	Colors transition,change speed by up and down,the bigger values,the faster
FL01-FL16	Colors Strobe flash,change speed by up and down,the bigger values,the faster
Sound	Sound control mode
R000-R255	Manual set R,Red color brightness setting,change brightness by up and down
G000-G255	Manual set G,Green color brightness setting,change brightness by up and down
B000-B255	Manual set B,Blue color brightness setting,change brightness by up and down

### DMX Control Parameter Chart

Channels	Value	Function
CH1	0-255	Color brightness control(this change should use together with CH2,CH3 or CH4)
CH2	0	Red light off
	1-255	Red brightness from dark to bright
CH3	0	Green light off
	1-255	Green brightness form dark to bright
CH4	0	Blue light off
	1-255	Blue brightness from dark to bright
CH5	0-7	No strobe flash
	8-255	Strobe flash(from slow to fast),the bigger values,the faster
CH6	0-10	Manual control(CH1-CH5)
	11-60	Colors selection(colors contorted by CH7)
	61-110	Colors shade(colors contorted by CH7),the bigger values,the faster
	111-160	Colors pulse transform(speed contorted by GH7)the bigger values,the faster
	161-210	Colors transition(speed contorted by CH7)the bigger values,the faster
	211-255	Sound control
CH7	0-255	Colors selection/colors shade(the bigger values,the faster)