

8.8.8.8.

LED Stage Light Equipment User Manual

LED DIGITAL PAR LIGHT

■9pcs RGBW 4 in1



CE

Please Read Over This Manual before Operating the Light Fixture

Diagram Instruction

DISPLAY		Function Instruction			
D001 all numbers		DMX512 mode, master-slave synchronization mode			
HOST or SLAV	signal condition setting, B.C Key modify setting	HOST	Host running when signal output		
		SLAV	No signal out put ; master-slave synchronization mode set as "SLAV"		
EO. 01 each group setting as the actual total		Follow strobe mode total units setting (follow strobe mode parameters requires)			
E-. 01 each group setting as the actual place		Follow strobe mode total number setting (follow strobe mode parameters requires)			
EE . 00		Follow strobe mode: There are 23 kinds of effects can choose (please set the total number of units and number)			
T . 0-255		Follow strobe speed setting			
A . 0-255	4 colors hopping mode				
C . 0-255	full color hopping mode				
J . 0-255	full color gradient mode				
L . 0-255	variable pulse mode				
N . 0-255	hopping, gradient, variable pulse modes combination				
P . 0-255	gradient strobe mode (built fixed fast strobe)				
1S . 0-20	Sound mode 1: voice strobe				
2S . 0-20	Sound mode 2 : Voice hopping				
R . 0-255	Color selection mode : red dimming setting				
G . 0-255	Color selection mode : green dimming setting				
B . 0-255	Color selection mode : blue dimming setting				
W. 0-255	Color selection mode : white dimming setting				
F . 0-255	Strobe model				

A : Function Selection Key

B : Plus Key

C : Minus Key

D : Confirm Save Key

O O O O
A B C D

DMX-512 Function Instruction 8 Channels-modify CH7 allows device synchronization)

Cha nnel	Value	Function Instruction
CH1	0-255	Total dimming
CH2	0-255	(RED) dimming
CH3	0-255	(GREEN) dimming
CH4	0-255	(BLUE) dimming
CH5	0-255	(White) dimming
CH6	0	No strobe
	1-255	Strobe speed from low to fast
CH7	0 macro function off 1-255 macro function effectively; CH1-CH6 Function off	CH1-CH6 channel color selection modes on (CH6 strobe setting) 1—29 : 4 colors hopping mode 30—59 : full color hopping mode 60—89 : full color gradient mode 90—119: variable pulse mode 120-149: hopping, gradient, variable pulse modes combination 150-179 :gradient strobe mode (built fast strobe) 180---199 save disabled 246—250 sound mode—hopping sound control 251--255 sound mode—strobe sound control 200-245 follow strobe mode:23 different selections (please set the total numbers of the units and numbers) 200-229 choose 1 colors from 9 230-243 choose 1 colors from 13 244-245 recycle effect
CH8	0-255	Macro LED speed from low to fast

Device Feature Setting